

ECOSURE EASY CONNECT SYSTEMS

Customer Guidelines




Thank you for purchasing an Ecosure Easy Connect System. We hope that you are happy with your purchase.



INSTALLATION GUIDELINES

- Although your tanks have been tested in accordance with our quality control procedures, please check the water tanks thoroughly to ensure that no damage has occurred in transit and report any damage within 48 hours of delivery.
- Tanks must be sited on a flat, level concrete base, and must be level with each other.
- Please leave at least a 50mm gap all around the tanks. This will allow for the natural expansion of the tanks when full of water.
- Install the Guttermate rainwater diverter approximately 40mm below the top of the tank, according to the manufacturer's guidelines. Please remember to keep the pipe running from the tank to the down-pipe level, to act as an overflow for the tank.
- Drill two adjacent 1" outlets for the connection kit using a 29mm holesaw or a spade bit, being careful not to damage the threaded outlet itself.
- Fit the 1" BSP compression fittings to both tanks using PTFE tape. Do not overtighten.
- Cut the pipe to the required length and connect to the compressions fittings.
- Fit the nipple, valve and compression fitting to the tank nearest the pump, again ensuring that the outlet is drilled.
- Cut the pipe to length and connect the pump to the tank.
- Fit wall mounted elbow to the wall and fit tap using PTFE tape.
- Cut pipe to length and connect Hydroforce pump to wall mounted tap.

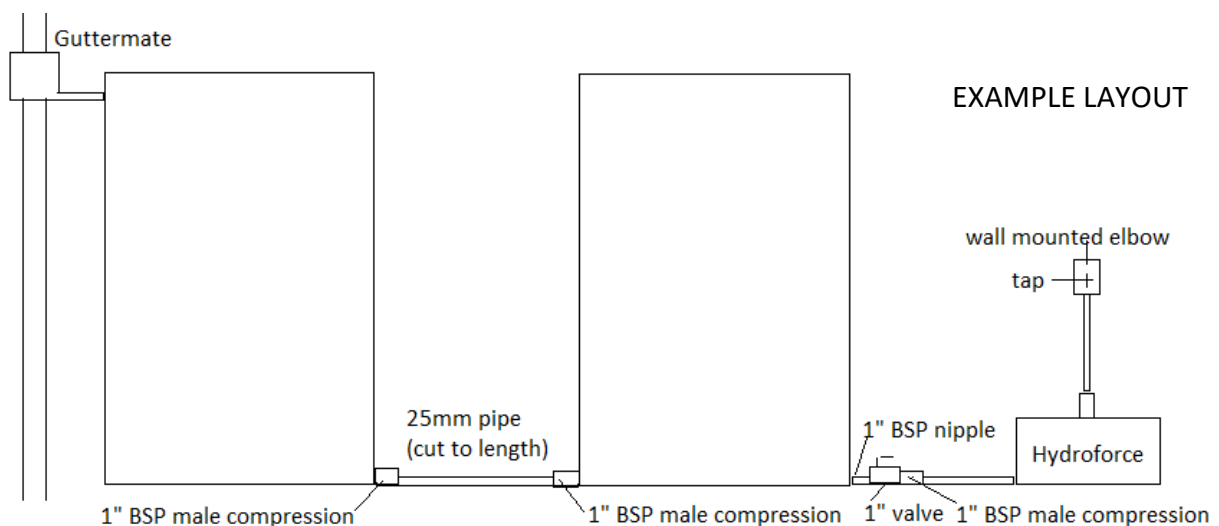

Call 01763 261781 for further advice or information